


SHEET "A"

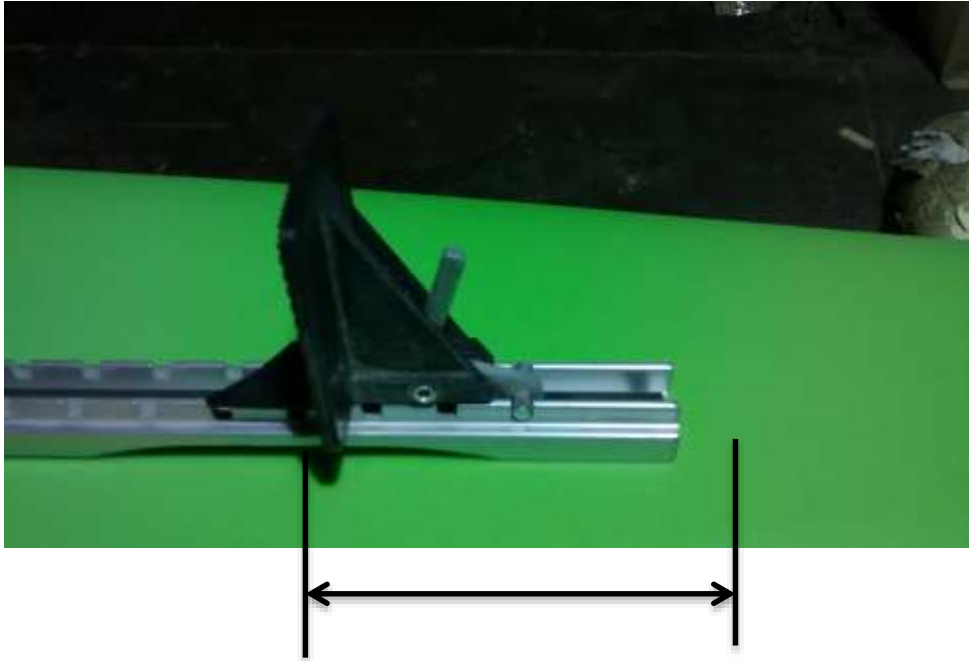

100mm (4") but this does not allow for any forward adjustment of the foot rest

When fitting foot rests you need to allow 100mm (4")

For example if you want a foot rest the bulkhead needs to be 4" further forwards. This however does NOT allow for any forwards adjustment of the footrest. So you also need to decide on the extra adjustment that you might need and add this to the to the 100mm.

To fit the foot rest you then stick a section of 25mm (1") tape up to the bulkhead and drill the hole for the footrest in the centre of the tape.

ALLOWING FOR FOOTRESTS WHEN ORDERING CUSTOM BULKHEAD



THE FITTING OF FRONT BULKHEADS



For a custom Bulkhead you need to give us the measurement from the front bulkhead to the inside vertical surface of the rear of the cockpit rim.

The model of kaya (ie Explorer, Pilgrim Expedition etc)

OR

Your inside seam (leg) measurement

How would we measure a custom bulkhead position for a (32") 800mm inside leg measurement?

For example on an **Explorer** or **Romany Classic**:

The custom bulkhead for a (32") 800mm inside leg measurement would be fitted as per the following: We would add (1") 25mm to allow for winter footwear. (33") 825mm inside leg measurement and foot rests. We have to allow an additional (4" See sheet A) in order to fit the footrest.

The measurement to allow for footrest for a 32" inside seam, is (55") 1375mm from the bulkhead to the rear of the inside edge of the cockpit rim.

The back of the seat measures approx. 800mm to the rear of the seat.



This example is the position for our standard bulkheads and seat in the following kayaks:

Explorer ~~Pro~~
Explorer HV
Greenlander Pro
Romany Classic
Romany Excel
Latitude
Triton
Cadance
Pulse



STANDARD FRONT BULKHEAD POSITIONS

The standard bulkhead allows for a 32" inside seam + 1" to allow for winter foot wear and the fitting of foot rests.

A
Model of kayak
Explorer
Explorer HV
Greenlander Pro
Romany Classic
Romany Excel
Latitude
Triton
Cadance
Pulse

B
Model of kayak
Explorer LV
Romany LV
Pilgrim
Pilgrim Expedition

Standard bulkhead positions

Rear of cockpit to front bulkhead

(55 inches) 1397mm

(52 inches) 1320mm



Standard Seat positions

Rear of cockpit to the rear of the seat

A

(3 1/8th") 80mm

(4 1/8th") 105mm



Standard Seat positions

B



Explorer LV
Romany LV
Pilgrim
Pilgrim Expedition

The seat position of the above kayaks are 1" (25mm) further forward. We therefore need to use the wider foam block when fitting the seat.



CUSTOM BULKHEADS

CUSTOM BULKHEAD POSITIONS TO INCLUDE FOOTRESTS					
KAYAK MODELS "A"		Standard 32" inside seam			
31"	32"	33"	34"	Custom bulkhead to include footrests	
54"	55"	56"	57"	Bulkhead position from the inside surface of the rear of the cockpit rim	
NOTE subtract 3 1/2 " for a custom bulkhead WITHOUT FOOTRESTS					
KAYAK MODELS "B"		Standard 31" inside seam			
29"	30"	31"	32"	34"	Custom bulkhead to include footrests
50"	51"	52"	53"	54"	Bulkhead position from the inside surface of the rear of the cockpit rim
		STANDARD			

Please NOTE we have allowed for a 1/2" 12mm tolerance on custom bulkheads

